

# SafLock System Scaffold® Scaffold Access Ladder Installation Instructions

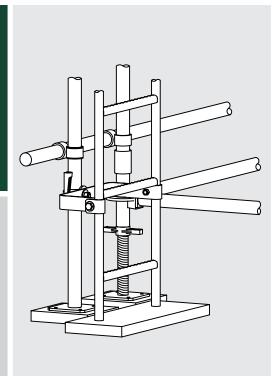



### 2 Scaffold Access Ladder Installation Instructions

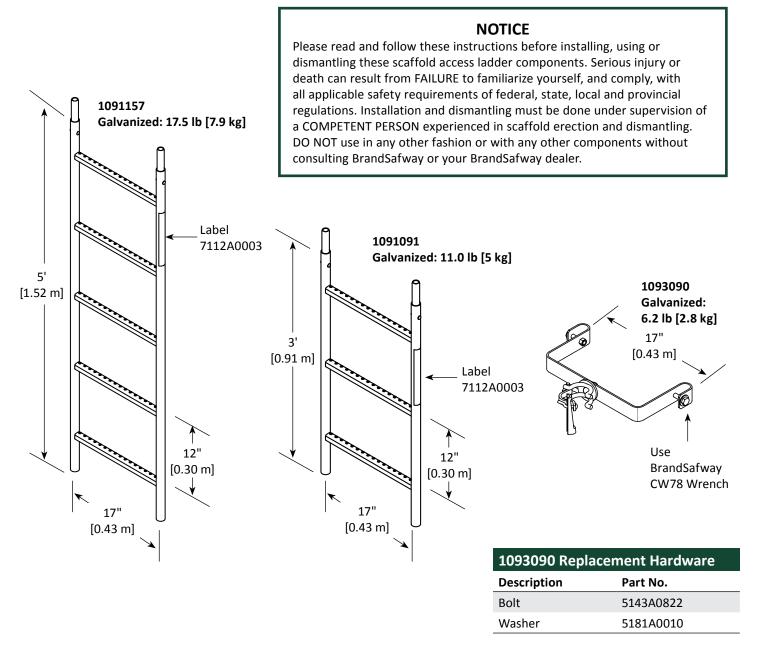


Use these installation instructions for 1091157, 1091091 and 1093090 when used with SafLock frame and brace, and tube and clamp scaffolds.

#### 1. General

- Position scaffold access ladders in a location that avoids possible obstructions.
- Install scaffold access ladders while working from a scaffold platform and use fall protection per employers fall protection plan.
- Install scaffold access ladder sections as scaffold is built.
- Install/use access gates as appropriate.
- Dismantle scaffold access ladder using reverse procedure.
- Follow appropriate BrandSafway Scaffold Safety Guidelines.


#### 2. Initial Planning

- Cordon off work area to prevent access by others.
- Conduct a hazard assessment with your crew.
- Ensure fall arrest equipment has been inspected and provided along with all necessary personal protective equipment (PPE).
- When feasible, and in accordance with applicable regulation, workers to be tied-off to an adequate anchor when exposed to a fall.

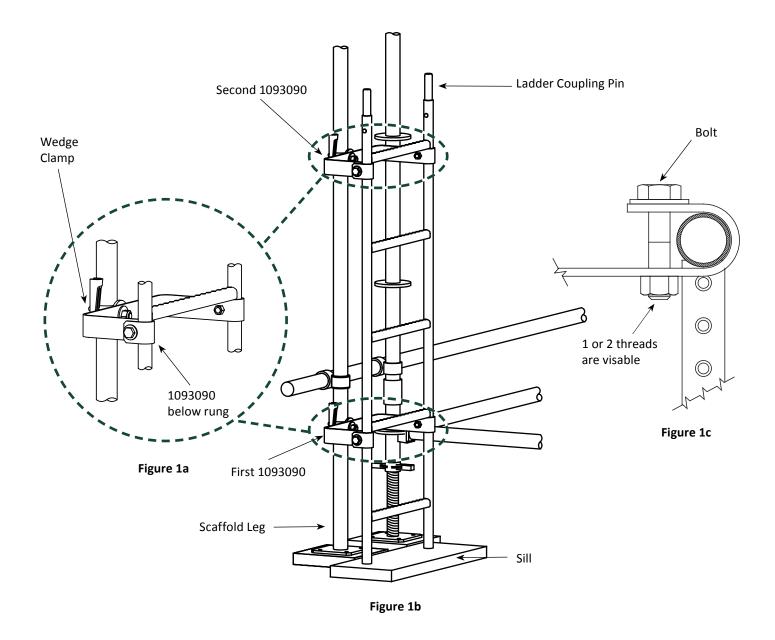

- Best practice is to position the first ladder onto a sill on the ground (see figure 1b). Ensure the ladder coupling pins are facing upwards.
- Only use hardware supplied with the 1093090.
- Install the first bracket under a rung near the bottom of the ladder. Install the second bracket under a rung near the top. Be sure the brackets are snugged up against the underside of the rungs (See figures 1a and 1b).
- Tighten the (2) bolts in each bracket until they are snug and 1 or 2 threads are showing (See figure 1c). Do not over tighten.
- Secure the wedge clamp around the scaffold leg (See figure 1b).


### 4 4. Intermediate Scaffold Access Ladder

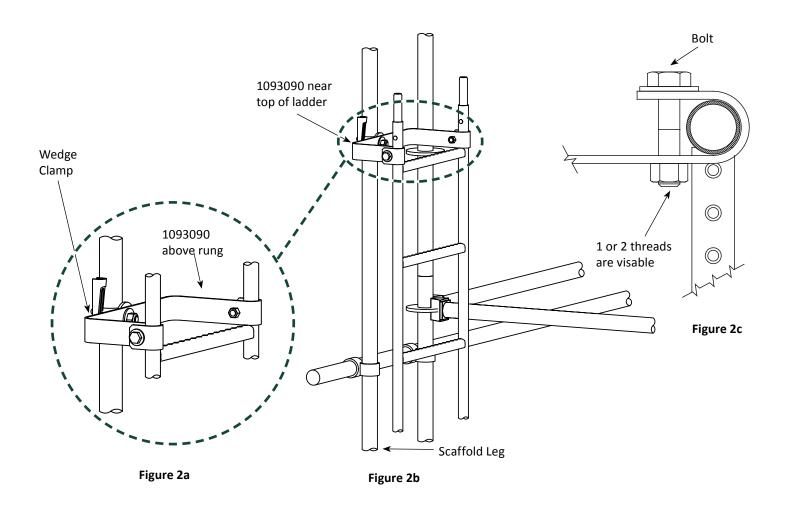


- Pre-install one bracket on the ladder above an upper rung and snug against the top of that rung (See figures 2a and 2b).
- Tighten the (2) bolts in the bracket until they are snug and 1 or 2 threads are showing (See figure 2c).
- Install the new ladder with bracket by lowering it over the coupling pins of the ladder below. Make sure it is fully seated (See figure 2b).
- Secure the wedge clamp around the scaffold leg.

## 5. Top Scaffold Access Ladder


- A 1091091 is available to allow approximately 3' [0.91 m] extension above the upper work platform.
- Installation of the 1091091 is the same as with all intermediate level ladders. Refer back to section 4.

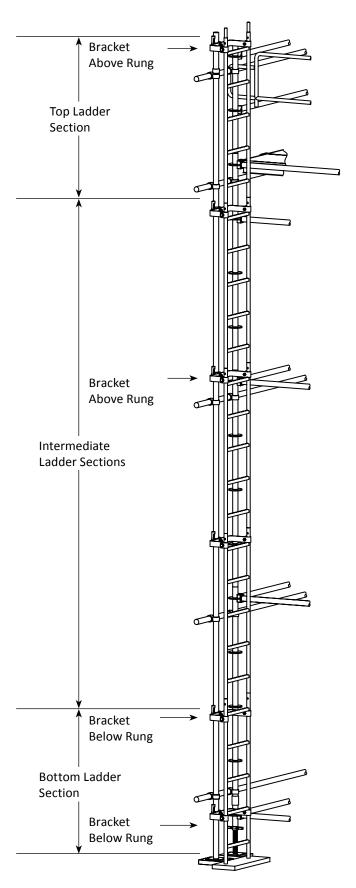

### 6 Notes

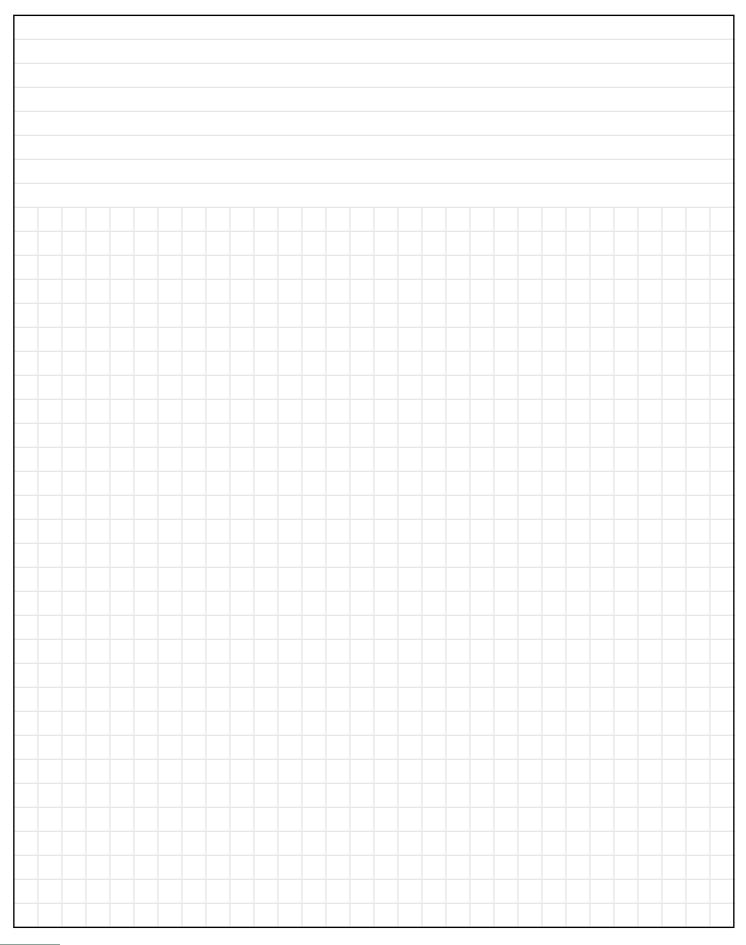

Notes 7

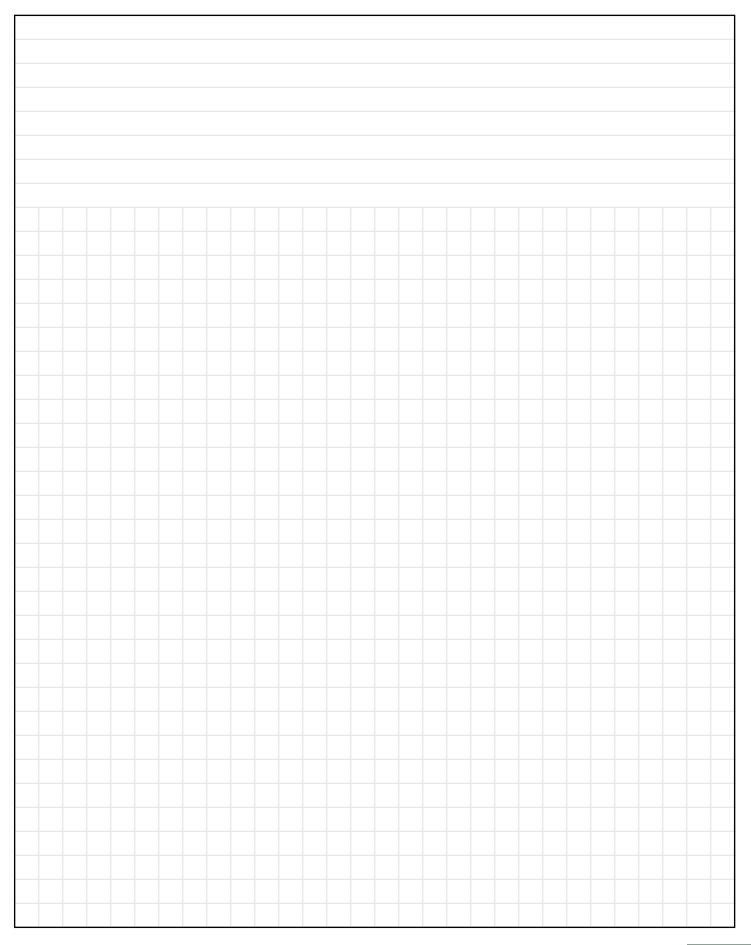

## BRAND SAFWAY.

With a commitment to safety as its foremost value, BrandSafway was created when Brand Energy and Infrastructure Services and Safway Group combined in 2017. BrandSafway is a portfolio company of Clayton, Dubilier & Rice.

#### **Brand Industrial Services, Inc.**

1325 Cobb International Dr. Ste A-1 Kennesaw, GA USA 30152

**Toll free:** 800 558 4772

For more information, visit our website at

www.brandsafway.com

©2018 All rights reserved. ORN 2206